


### Self-made tool


#### Pressing-off mandrel

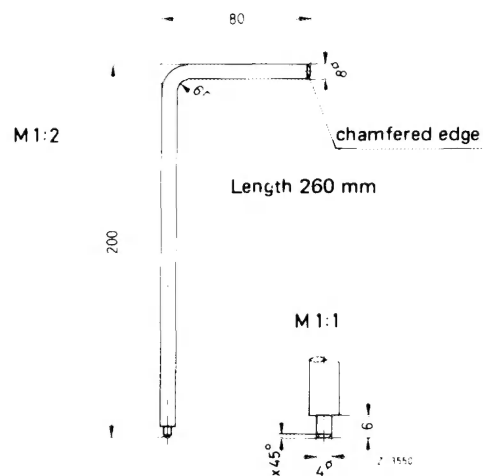

### Model 115.1 1st version

#### Removal


Remove accelerator pedal from bearing plate (14). For this purpose, unlock clip (15) from bearing plate by means of pressing-off mandrel (14a).

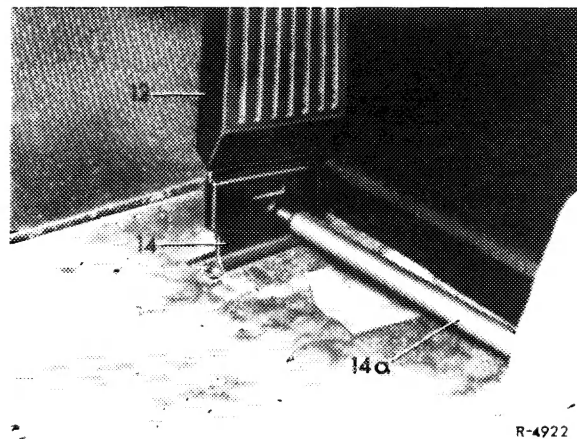

R-4922

Pull off accelerator pedal in upward direction and pull out of pedal lever (10).

**Note:** Be sure to use pressing-off mandrel, so that clip on accelerator pedal is not damaged. The pressing-off mandrel is self-made according to drawing.

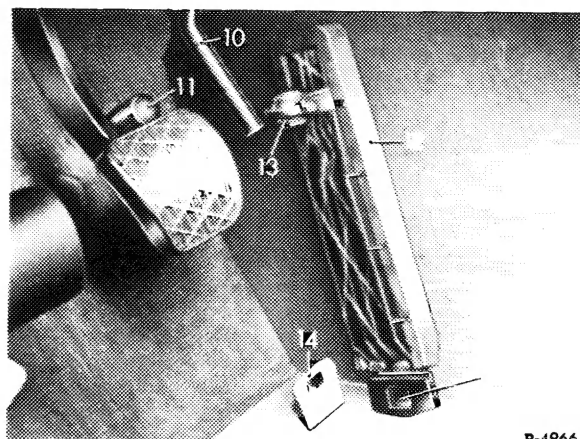

R-4966

- |                       |                  |
|-----------------------|------------------|
| 10 Pedal lever        | 13 Joint         |
| 11 Full throttle stop | 14 Bearing plate |
| 12 Accelerator pedal  | 15 Clip          |

## Installation

---

Slip accelerator pedal with joint (13) into pedal lever (10) and push tightly on bearing plate (14) so that clip (15) is reliably engaging.

Model 115.1 2nd version and model 123.1

## Removal

---

Press expanding clip together and pull out.

## Installation

---

During installation, make sure that expanding clip is reliably engaging.

